

# CHARLOTTE EDWARDS



## INSTALLATION GUIDE



# INSTALLATION GUIDE


THANK YOU FOR PURCHASING ONE OF OUR BATHS

THIS GUIDE IS THE BASIC PROCEDURE, PLEASE SEEK THE ADVICE AND ABILITIES OF A QUALIFIED PLUMBER AS THE BELOW RECOMMENDATIONS MAY NOT BE APPLICABLE FOR ALL BATHROOMS


**1.** TOOLS REQUIRED= TAPE MEASURE, PENCIL, DRILL +DRILL BITS, SILICONE GUN + A WATERPROOF SILICONE.




**2.** measure the position of the drainage hole

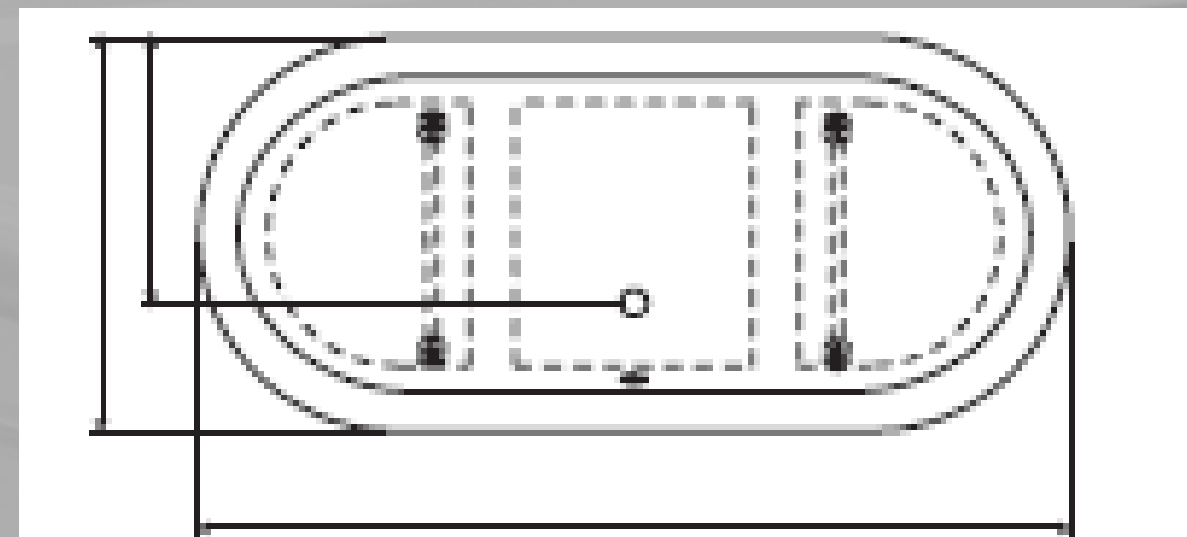

**3.** Drill a hole in the floor for the draining pipe

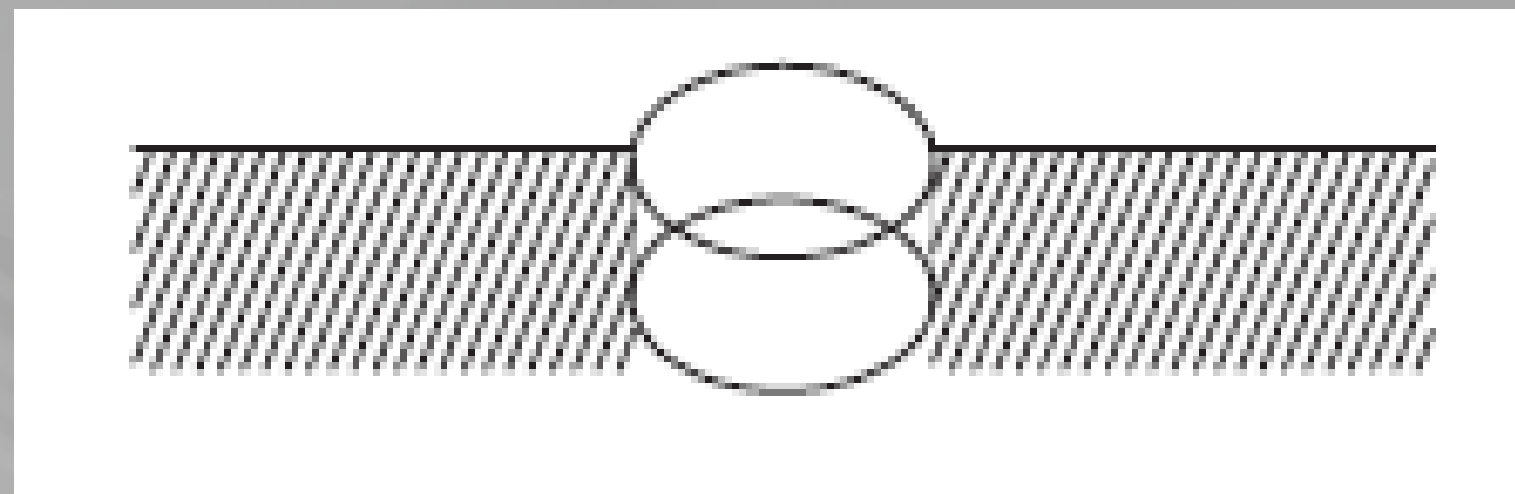


**4.**

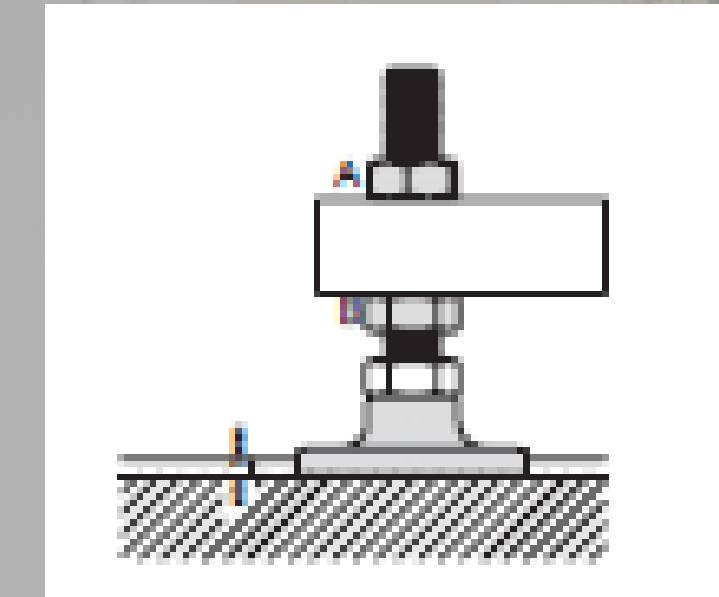

ADJUST THE FEET UNTIL LEVEL WITH EACH OTHER, THE BOTTOM OF THE BATH AND TAKING INTO ACCOUNT AN UNEVEN FLOOR

**5.**

Connect the waste to the drainage pipe as shown in the diagram on page 3 of this guide  
(GREY WATER PIPE & P TRAP NOT SUPPLIED)

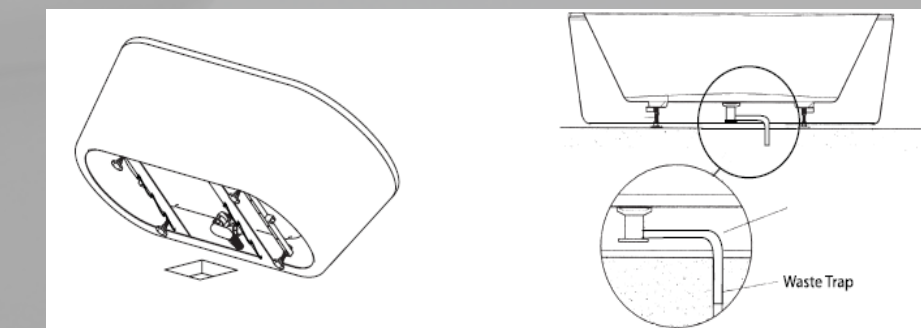

To test for any leaks pour some water in the bath, open the pop up waste and make sure all the water runs into your buildings grey water system

**6.**

Apply silica gel to any area contacting the floor then gently lower the bath into position we recommend 24hrs before using the bath to allow the silica to bond with the floor surface. DONE

